

BOSCH SOLUTION 6000

PROGRAMING CHEAT SHEET

To get into programming mode, enter 1234 MENU. This will access the programming mode.
To exit programming mode, press and hold the MENU button.

ADDING OR CHANGING CODES

MENU 1-1-0 Change own code. This is to change the Installer code. This **MUST** be changed.
Press OK, enter your new four digit installer code followed by OK. You will need to confirm this code by entering the same 4 digits, then press OK.

MENU 1-1-2. Adding a code this is where you will change your master code (by default the code is 2580 – this code must be changed from default). User one is the master code, press OK, enter your new four digits and press OK. This code cannot be the same as the installer code.

ENABLE RECEIVER

MENU 3-5-0 - PGM input. You need to make this 04 - Bosch Serial Receiver. Press OK.
Exit Programming mode (press and hold MENU button) then re-enter programming mode.
This allows you to now add remotes and Wireless PIRs.

ADDING REMOTES

MENU 1-3-0. Press OK on user one if you want to assign this to the first user , enter the nine digit RFID code of the back of the remote or simply press the top left button of the remote in and you will see the ID appear on the screen , press OK to save data .
If more than one remote, repeat step for User 2 and onwards.

ADDING WIRELESS PIRS .

MENU 3-3-0. Select what zone number to be learnt in (make sure batteries are already inside the PIR), enter 9 digit RF ID number in the keypad, press OK to save the information.

ADDING TOKENS

MENU1-2-0 to add a tOKEN if you have a prox keypad, select the User Number, press OK, swipe token against the keypad and once it has learnt press OK .

ZONE TYPES

You can change each zone type eg Entry Delay 1 ,Entry Delay 2 , Instant, or disable a zone if it's not being used.

MENU 3-1-1 select what zone you want eg zone 1 . then use the up and down arrow button to select what zone type you want to make it and press OK . This will take you back to zone type so you can program zone 2 and onwards.

ZONE NAMES

MENU 3-1-0. You can custom label zones. For example; Entry, Lounge, Master Bedroom, etc. Select the zone and press OK. You can then use the keypad buttons to change the name of each zone.

COMMUNICATIONS

The solution 6000 can do SMS reporting to your mobile.

If you are using a phone line you will need to configure the alarm as followed

MENU 5-4-0

You will need to make this 06 SMS press OK.

MENU 5-1-1

This is where you enter your mobile numbers to receive SMS. Up to 5 numbers can be programmed for Destination 1.

MENU 2-2-2

Open close reporting. To disable this you will need to make this 00 – LOG EVENTS ONLY.

If you are not using the phone line but have a GSM module, in MENU 5-4-0 you will need to make this 12 GSM SMS. The mobile numbers are still programmed in location 5-1-1.

The GSM has the feature to remote arming via SMS.

MENU 6-5-7: SMS CONTROL. Enter the phone numbers that are allowed to send the GSM a text message for arming or disarming.

TEST REPORT PERIOD

MENU 5-9-2

You want to make this 00 – NO TEST REPORTS so the system does not send you a SMS at 2 am. This will still allow you to press and hold the TEST/MAIL button (next to the 0) to force a manual Communications Test.

ENTRY / EXIT TIMES


MENU 2-8-0 EXIT DELAY. This is how long you will have to exit the house. This is as system wide.

MENU 2-8-1 ENTRY TIME 1. This is how long you have to get into the house.

MENU 2-8-3 PART ENTRY TIME. This is the time for the Part Mode Arming Entry Time.

SETTING UP PART ARMING

MENU 3-1-8 ZONE OPTIONS. Select what zone you DO NOT want armed at night. Press OK, scroll down until ARMED IN PART. By default this option is ticked. To un-tick it press OFF and press OK to save. Do this for all zones NOT armed at night.

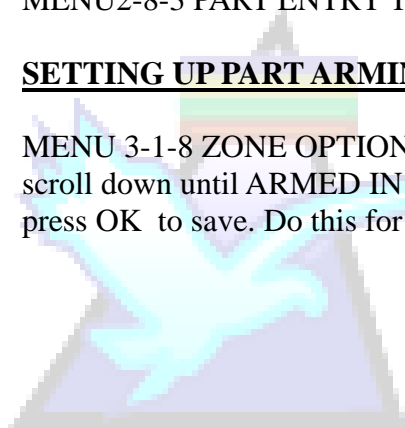

CTC
COMMUNICATIONS

STROBE TRIGGER VIA REMOTES

MENU 2-1-5. Press OK on Security System (AREA 1 NAME) then scroll down to KEYFOB ON/OFF. This will give u a strobe flash from the remote control .

SPEAKER BEEPS VIA REMOTES

MENU 2-1-3. Speaker Beeps on Key Fobs. This option you will want to turn off otherwise every time you arm the alarm with your remotes the siren will beep 3 loud beeps. To un-tick press OFF then OK to save.

SET DATE AND TIME

MENU 7-1-0 Set Time and Date ,
Using the arrow keys, enter the time and date then press OK to save.

SOME TIPS

On the PCB put the jumper on the LAN term pins over the yes, also put the jumper of the relay between COM and GND

EOL RESISTORS

Zones 1-8 use a 3k3 the orange ones ,
Zone 9-16 use the 6k8 the blues .

You will need to put a 3k3 across the internal siren,
All ways press OK to save data. If you don't the changes you have made will not be saved.